

PoweringUp

1.Start Chassis

Turn the red rotary switch on the chassis to start the power of the entire machine. You will hear three beeps from the buzzer. The chassis can now be controlled with the remote, and power has been supplied to the robotic arm, lift mechanism, and computer.



2.Turn on Computer

If the computer does not start automatically, press the power button on the computer.



#1

Yixuan Jiang ### 23 2024 13:23:12

Yixuan Jiang ### 23 2024 13:44:02